



Terminal	Function	Wiring
1	MODBUS RS485 connection	B A 1
2	External control	IN4
3	External stop	IN3
4	Fire system	IN2
5	OVR control	IN1
6	Common	C
7	Return water temp. sensor	B5 NTC
8	Supply temp. sensor	B1 NTC
9	Humidifier control	TG3 0...10V GND
10	DX 0-10V control	TG2 0...10V -24V N
11	Hot water mixing valve actuator	TG1 0...10V -24V N
12	Cooling water pump 230VAC	S2 L N
13	Heating water pump 230VAC	S1 L N
14	Humidity sensor	B9 0...10V -24V N
15	Air quality sensor	B8 0...10V -24V N
16	Exhaust air pressure sensor	B7 0...10V -24V N
17	Supply air pressure sensor	B6 0...10V -24V N
18	Supply/exhaust air damper actuator	FG1/2 L1 -24V N
19	Run Alarm Common	NO NO C
20	Heating Cooling Operation Common	NO NO C
21	Water pump/coil alarm	IN5 C